



(Not to scale)

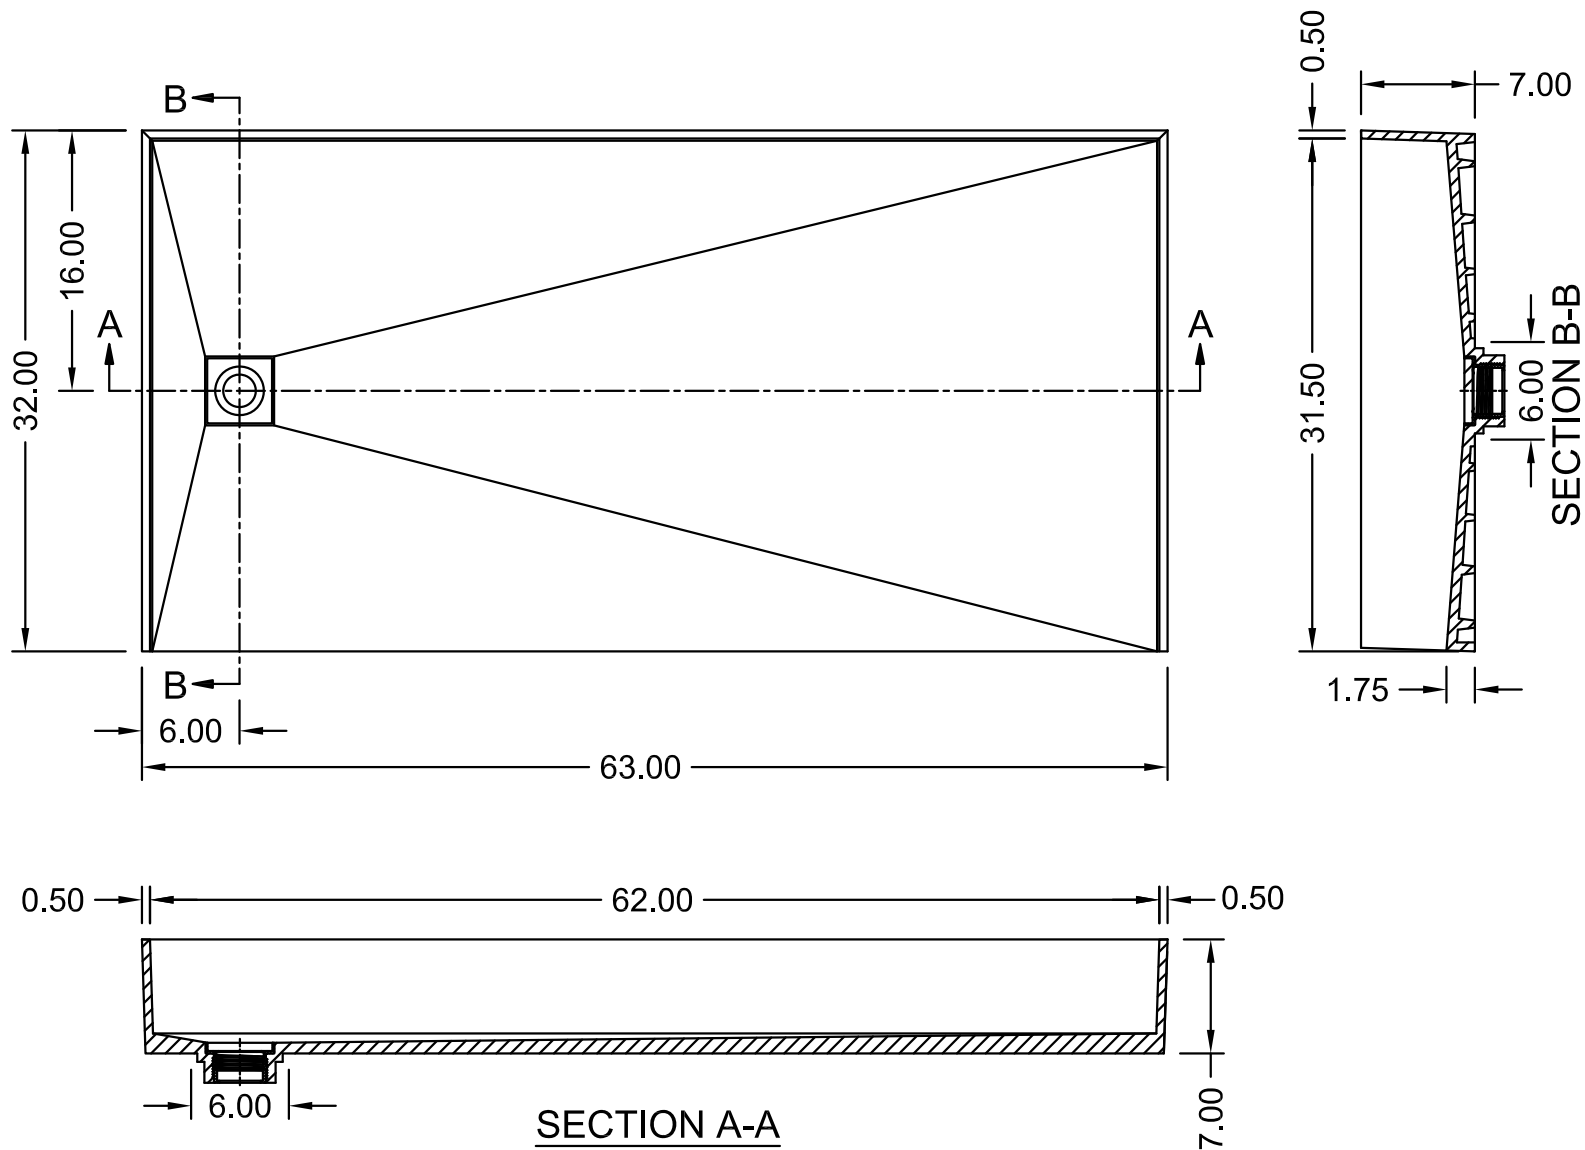

Redi Free Installation: For a proper barrier free pan installation, subfloor must be recessed to the depth of the front lip of pan in accordance with local codes.

Tolerance: All dimensions are within tolerances of +/- 0.25" unless otherwise noted.

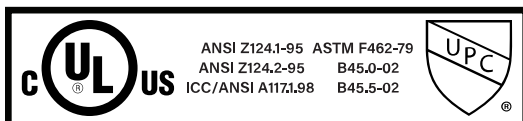

Toll Free: 800.232.6156
Tel: 954.323.0125
Fax: 954.344.8064

techsupport@tileredi.com
www.tileredi.com

tile
redi

2025.07.22