


(Not to scale)

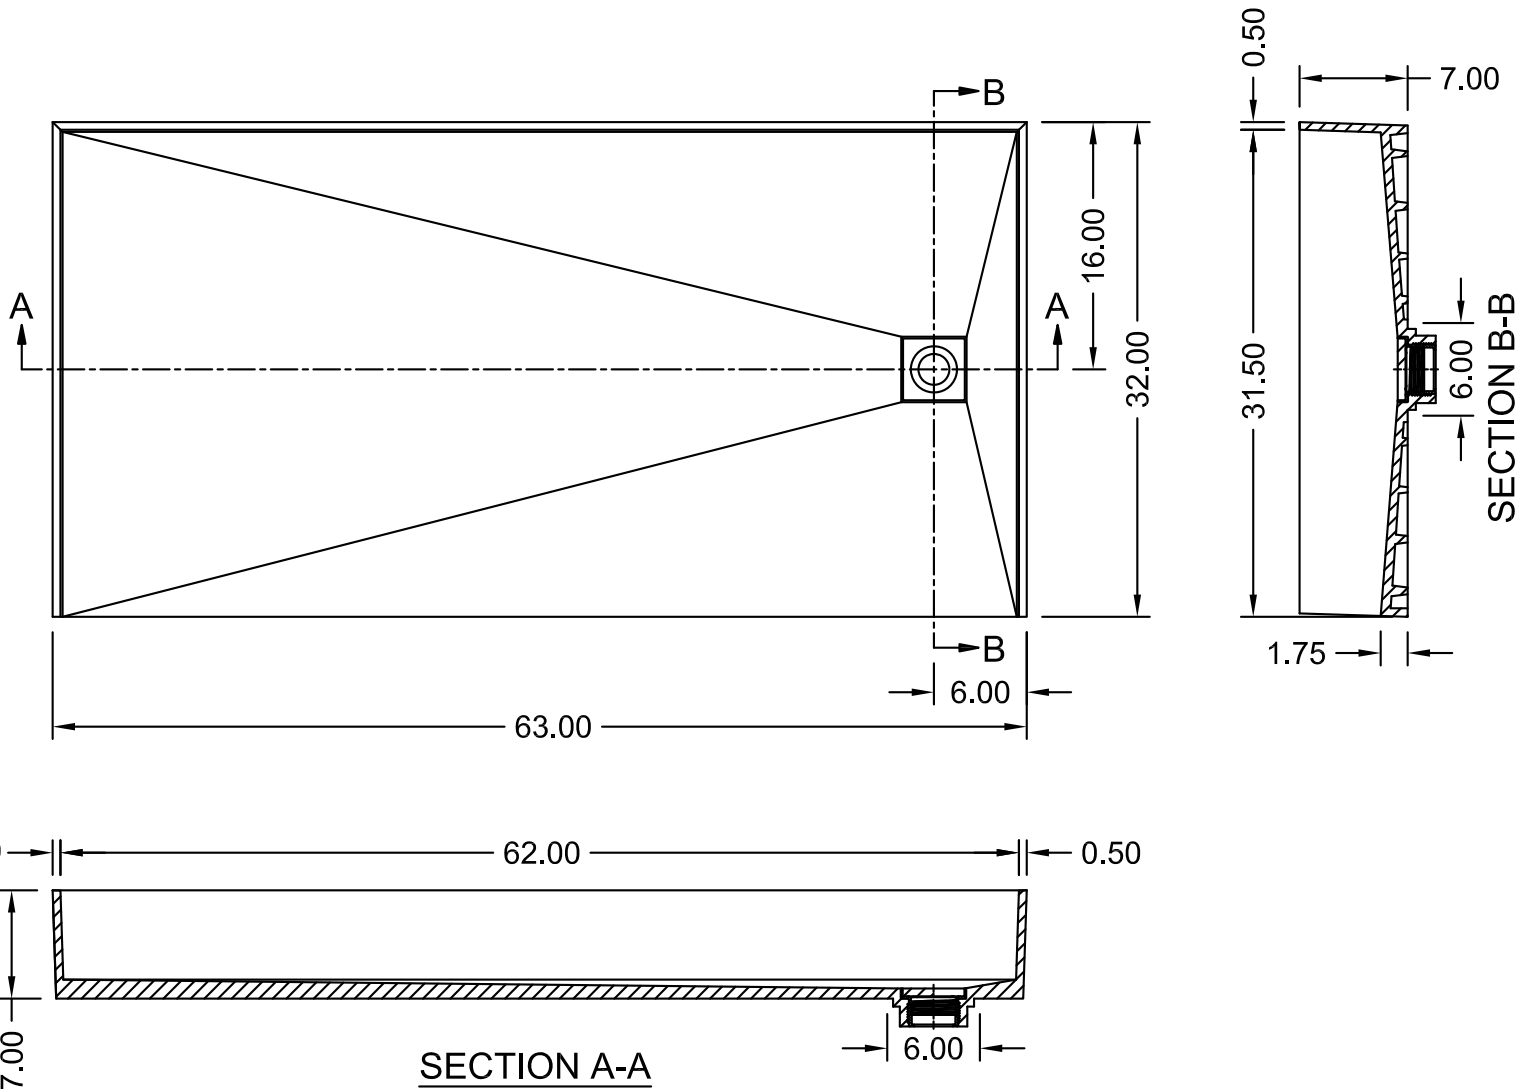

Redi Free Installation: For a proper barrier free pan installation, subfloor must be recessed to the depth of the front lip of pan in accordance with local codes.

Tolerance: All dimensions are within tolerances of +/- 0.25" unless otherwise noted.



ANSI Z124.1-95 ASTM F462-79  
ANSI Z124.2-95 B45.0-02  
ICC/ANSI A117.1.98 B45.5-02



Toll Free: 800.232.6156  
Tel: 954.323.0125  
Fax: 954.344.8064

techsupport@tileredi.com  
www.tileredi.com

tile  
redi

2025.07.22