


(Not to scale)

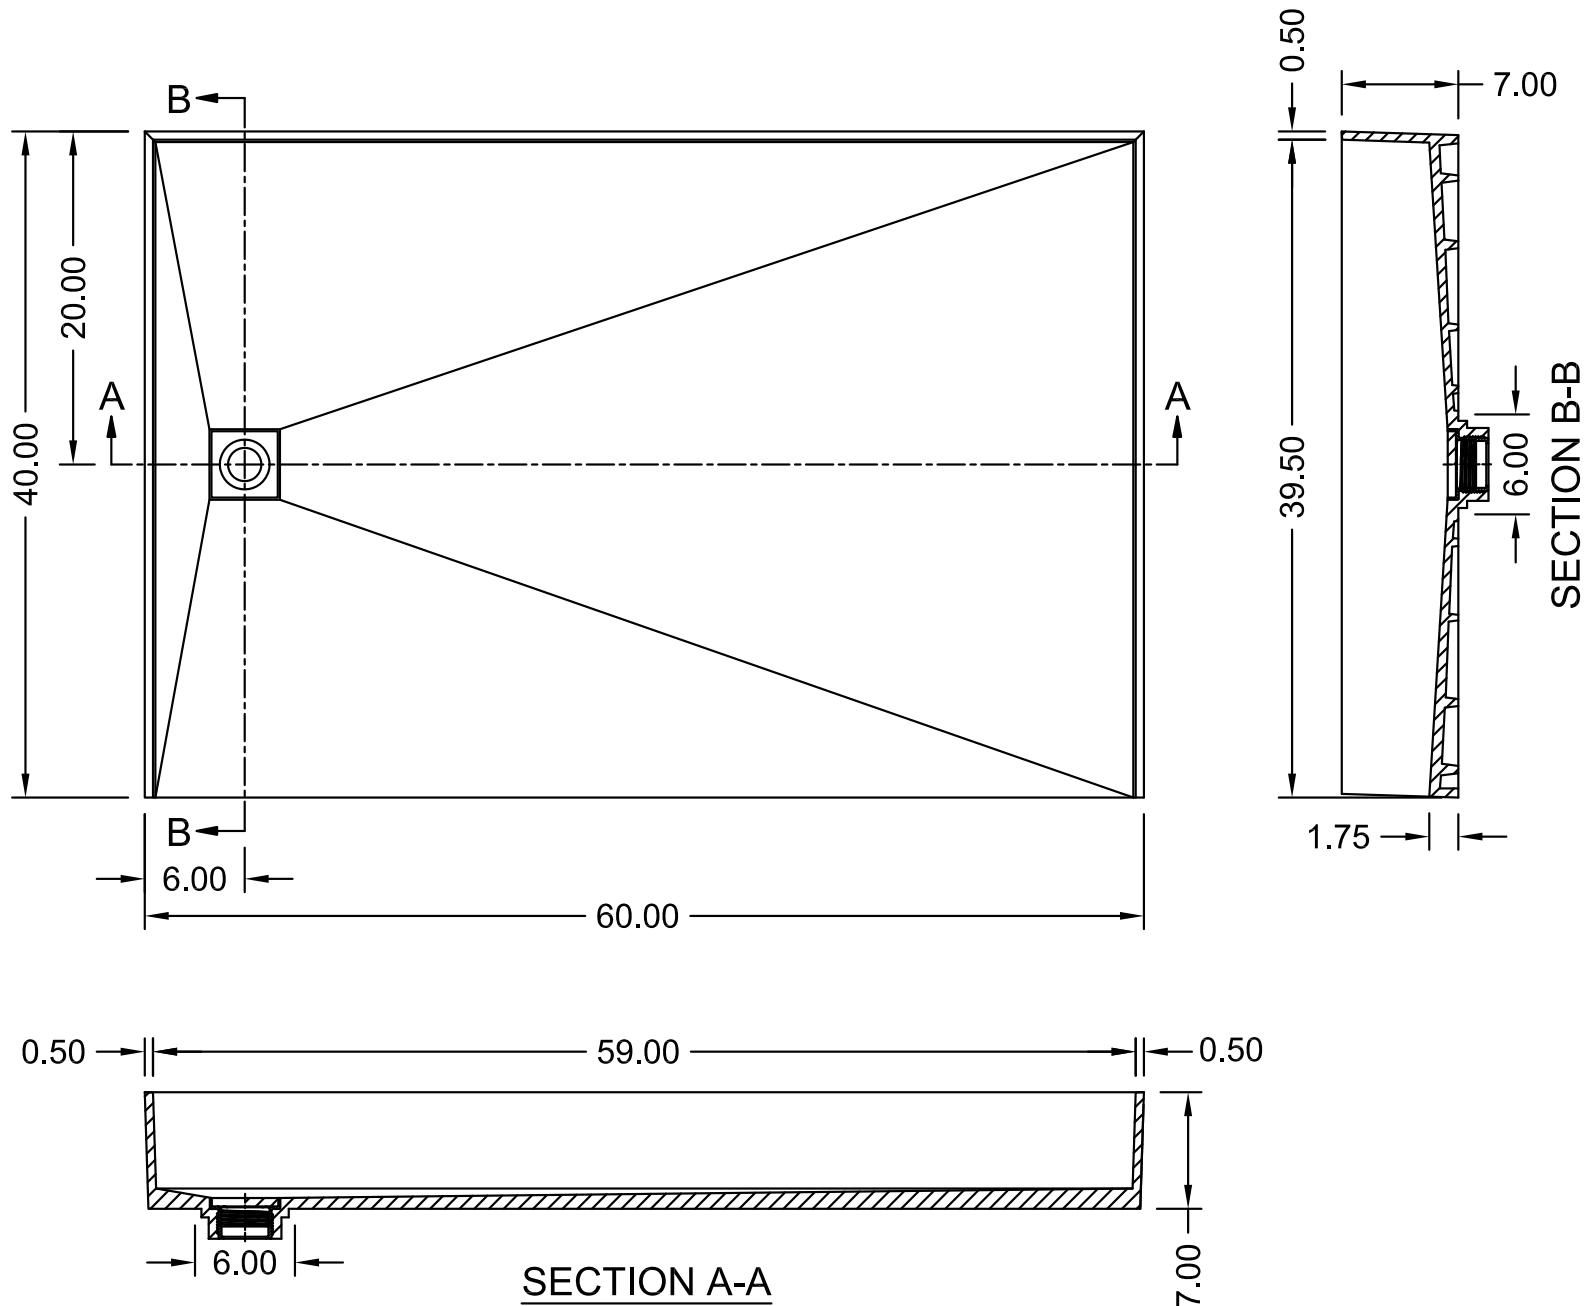

Redi Free Installation: For a proper barrier free pan installation, subfloor must be recessed to the depth of the front lip of pan in accordance with local codes.

Tolerance: All dimensions are within tolerances of +/- 0.25" unless otherwise noted.